


Over-the-Cap Mount Installation Guide

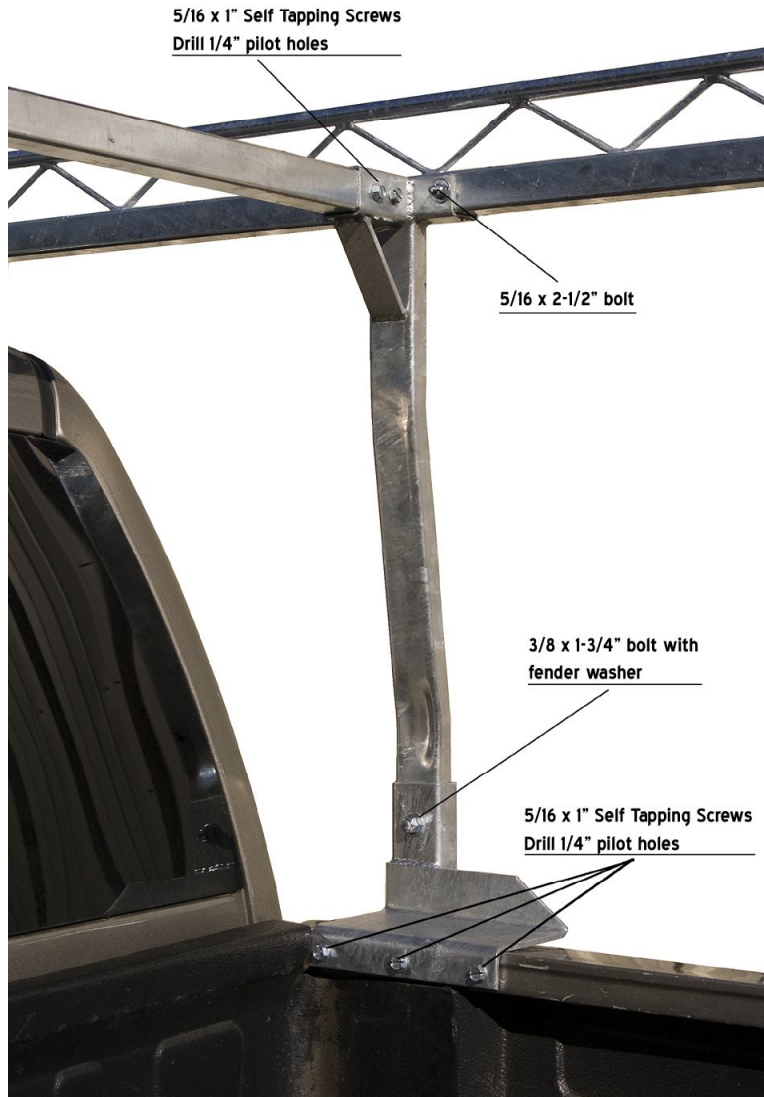

Cut crossbars to size. Front and back crossbars are cut to 2" longer than the outside demension of the side rails. For the middle crossbar measure the inside of the support plate, where the upright pocket is attached, and subtract 2 1/2". Insert the crossbar into pockets prior to securing both uprights.



TOPPER
MANUFACTURING
COMPANY INC.
1727 - N.E. Frontage Road, Sturtevant, WI
P: (800)776-7020 F: (262)886-9252
www.toppermfg.com