


Handyman Double Bar Van Rack Installation Guide

Parts List

- 4 - Supports
- 4 - Gutter Clips
- 4 - Threaded Hooks
- 4 - 5/16" nylon locking nut
- 2 - Crossbars
- 8 - 5/16" self threading screw
- 12 - Rubber paint protectors

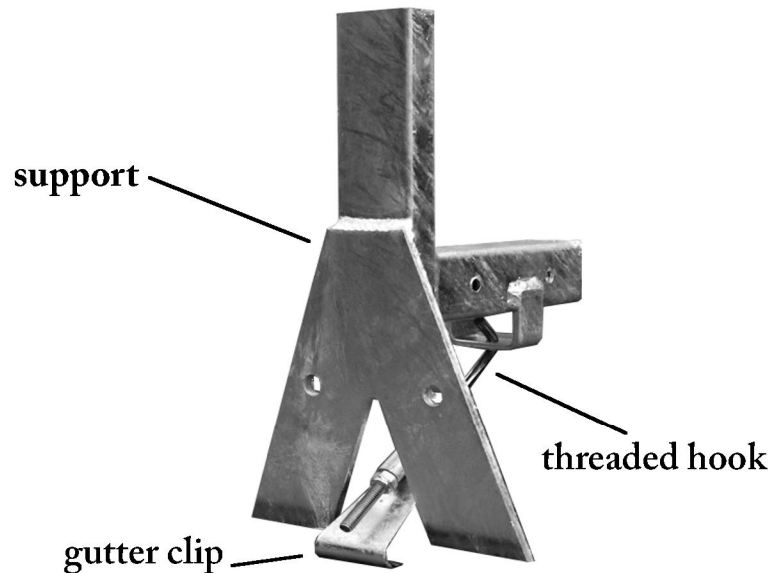

-
- 1.) Insert crossbar into pocket on support all the way and drill a 1/4" hole on each side using the hole towards the end of the pocket as a guide. Install 5/16" x 1" self threading screw on each side.
 - 2.) Place the support with crossbar attached on roof of van in desired location. Slide the other support onto the crossbar and drill a 1/4" hole on each side using the hole towards the end of the pocket as a guide. Install 5/16" x 1" self threading screw on each side.
 - 3.) Insert the threaded hook into the support, slide gutter clip onto threaded hook and push up under the van rain gutter. Place 5/16" nylon locking nut onto threaded hook and tighten both supports equally. Be carefull not to over tighten.
-

WARNING

Observe load limits of 500# for standard & 750# for heavy duty, and securely tie down all objects carried on rack. Periodically check and tighten nuts on threaded hooks. DO NOT drill into or alter rack in any way. Failure to follow these instructions could result in an accident. For questions regarding installation contact customer service at (800)776-7020.

We're on top to stay!



TOPPER
MANUFACTURING
COMPANY INC.

(800)776-7020

www.toppermfg.com

